



DE


GERMANY

Diagram / Parts List

DMR103B

JOG SITE RADIO



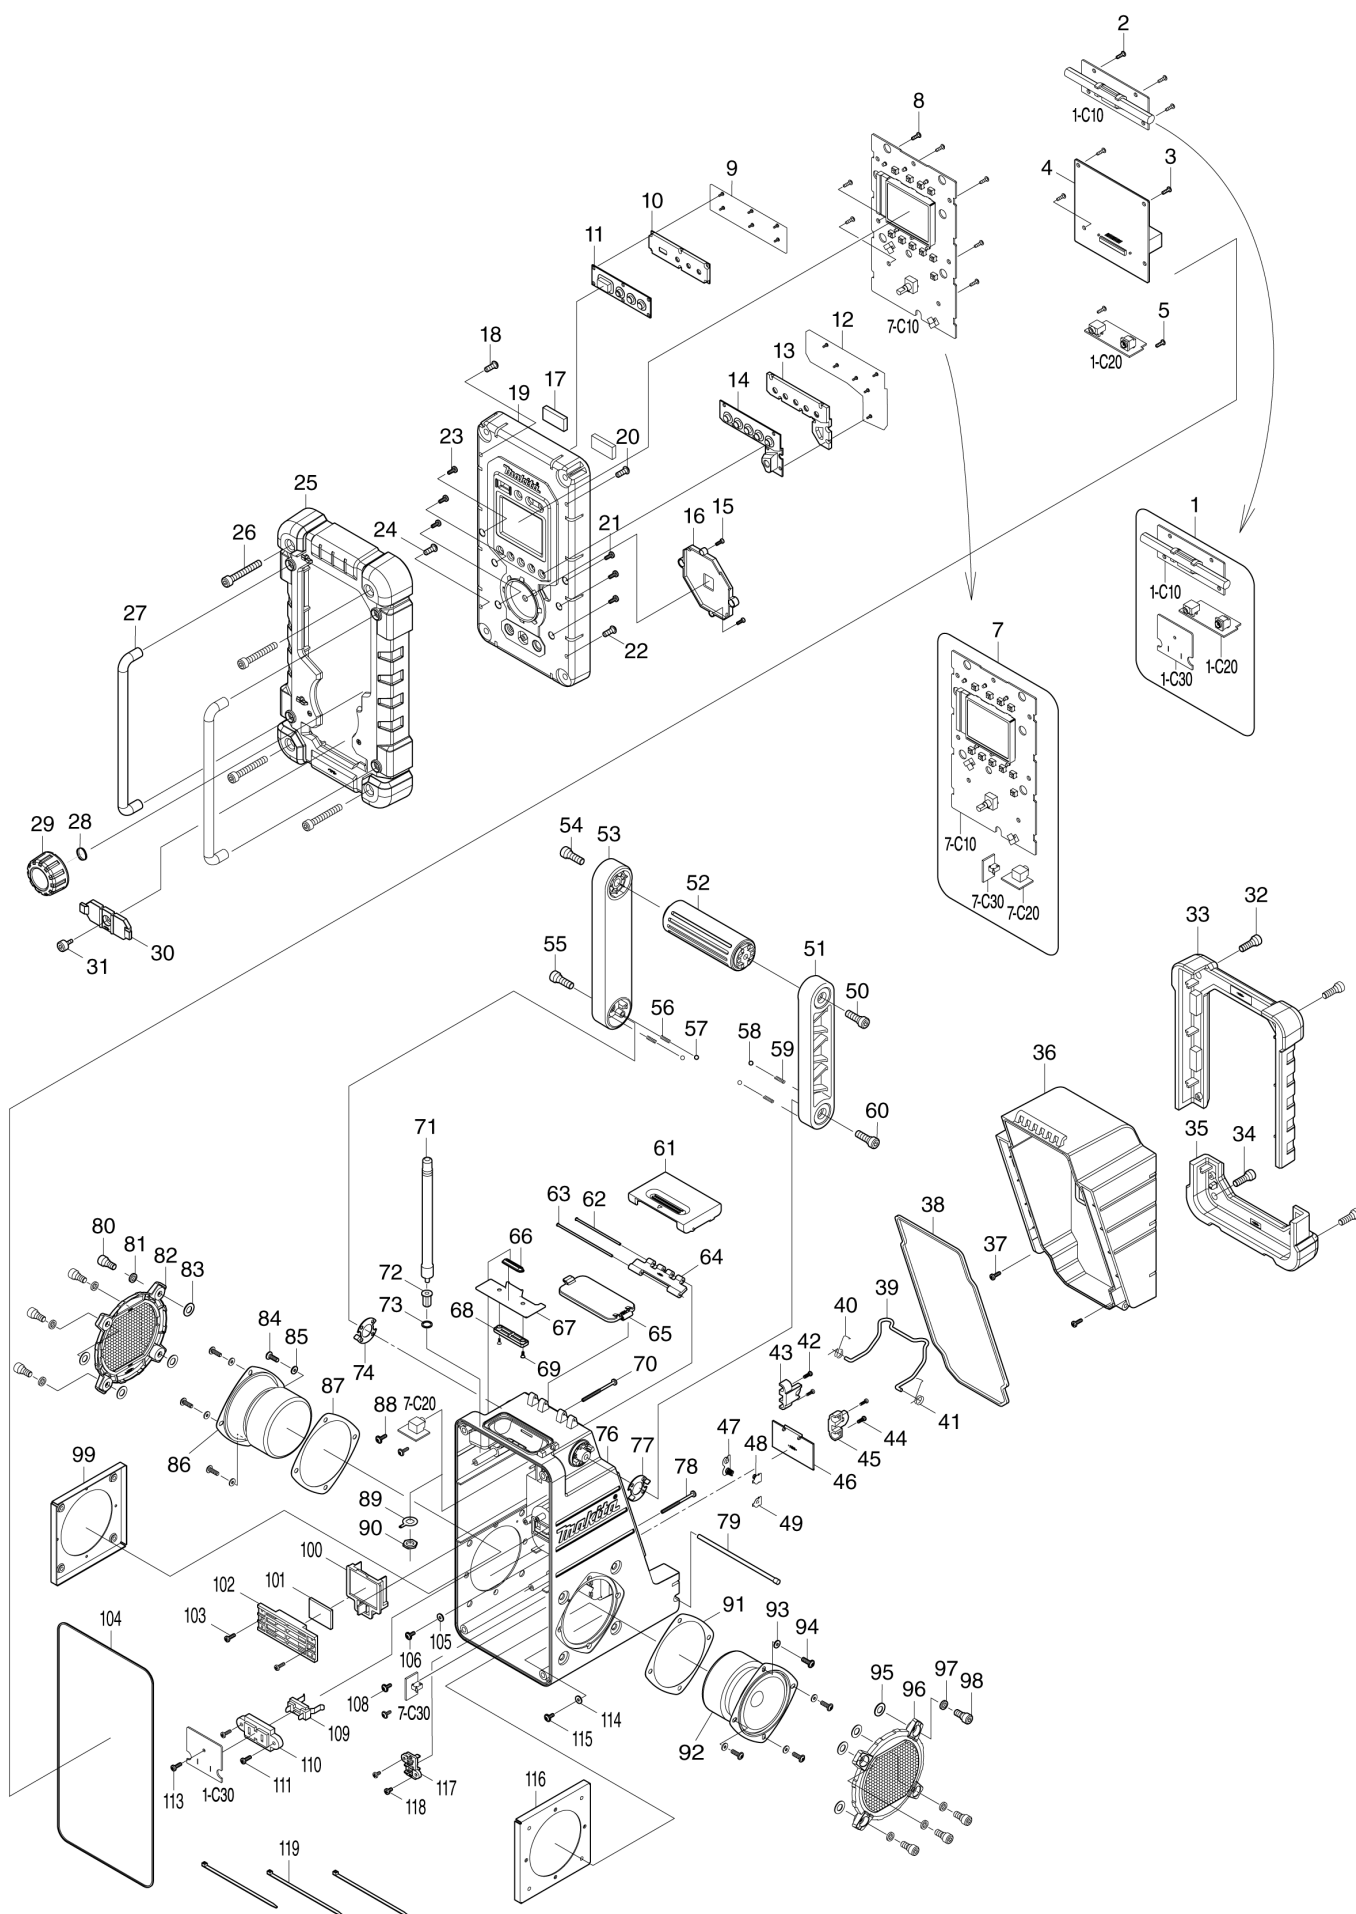

DMR103B / JOG SITE RADIO

Item	Sub	Parts No.	Parts Description	Qty	I/C	E/C No.	Close No.	Remark
001		SE00000213	CIRCUIT BOARD F ALL ASS'Y	1				
	C10	SE00000214	CIRCUIT BOARD F ANT ASS'Y	1				
	C20	SE00000215	CIRCUIT BOARD F DC-JACK ASS'Y	1				
	C30	SE00000216	CIRCUIT BOARD F PWR-WIRE ASS'Y	1				
002		SE00000193	SCREW 3X10	3				
003		SE09163102	SCREW M3X10	3				
004		SE00000217	CIRCUIT BOARD A ASS'Y	1				
005		SE00000193	SCREW 3X10	2				
007		SE00000218	CIRCUIT BOARD C ASS'Y	1				
	C10	SE00000219	CIRCUIT BOARD C	1				
	C20	SE00000220	CIRCUIT BOARD C AUX-2 ASS'Y	1				
	C30	SE00000221	CIRCUIT BOARD C BATT. DET ASSY	1				
008		SE09163102	SCREW M3X10	7				
009		SE09090011	SCREW 1.7	6				
010		SE00000234	POWER BUTTON HOLDER	1				
011		SE00000235	POWER BUTTON	1				
012		SE09090011	SCREW 1.7	6				
013		SE00000236	PRESET BUTTON HOLDER	1				
014		SE00000237	PRESET BUTTON	1				
015		SE00000238	SCREW PTB M2.6	2				
016		SE00000239	KNOB LENS HOLDER	1			Y07713	
016-1		SE00000656	KNOB LENS HOLDER	1	<	Y07713		
017		SE00000240	ANT BAR SPACER	2				
018		SE09064161	SCREW M4X16	1				
019		SE00000241	FRONT CABINET ASS'Y	1				
020		SE09064161	SCREW M4X16	1				
021		SE09163102	SCREW M3X10	3				
022		SE09064161	SCREW M4X16	1				
023		SE09163102	SCREW M3X10	3				
024		SE09064161	SCREW M4X16	1				
025		SE00000242	FRONT BUMPER	1				
026		SE00000160	SCREW PTHE6X47(CR)	4				
027		SE0338PC5Z	FRONT BAR	2				
028		SE21B1110A	ROTARY KNOB RING	1				
029		SE00000243	ROTARY KNOB	1				
030		SE00000244	JACK COVER	1				
031		SE09173106	HEX SCREW M3X10	1				
032		SE09176166	HEX SCREW M6X16	2				
033		SE00000162	BATTERY COVER BUMPER	1				
034		SE09176166	HEX SCREW M6X16	2				
035		SE00000165	REAR BUMPER	1				
036		SE00000245	BATTERY COVER	1				
037		SE09163102	SCREW M3X10	2				
038		SE00000168	PACKING	1				
039		SE00000169	SUPPORT BAR	1				
040		SE00000170	SPRING-L	1				
041		SE00000171	SPRING-R	1				
042		SE09163102	SCREW M3X10	2				
043		SE00000246	SPRING HOLDER-L	1				
044		SE09163102	SCREW M3X10	2				
045		SE00000247	SPRING HOLDER-R	1				
046		SE00000248	BACK UP BATTERY COVER	1				
047		SE021E9030	+/- BATTERY CONTACT ASS'Y	1				
048		SE021E9020	BATTERY CONTACT (-)	1				
049		SE021E9010	BATTERY CONTACT (+)	1				
050		SE00000176	SCREW PTHE6X20(CR)	1				
051		SE00000249	HANDLE HOLDER(R)	1				
052		SE00000179	HANDLE	1				
053		SE00000250	HANDLE HOLDER(L)	1				
054		SE00000176	SCREW PTHE6X20(CR)	1				
055		SE09176166	HEX SCREW M6X16	1				
056		SE00000184	SPRING	2				
057		SE09994007	STEEL BALL	2				
058		SE09994007	STEEL BALL	2				
059		SE00000184	SPRING	2				

Interchange

O : Yes

X : No

< : the new part can be substituted for the current.

> : the current part can be substituted for the new.

S : Interchangeable as a set.

DE | GERMANY

DMR103B / JOG SITE RADIO

[illegible]