



Model PH05 Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
001	183C34-7	HOUSING SET	1	
	D10	INC. 17		
002	851T68-7	PH05 NAME PLATE	1	
003	266429-2	TAPPING SCREW 3X16	8	PC.
004	456532-9	SPEED CHANGE LEVER	1	
005	233025-1	COMPRESSION SPRING 2	2	PC.
006	419041-9	F/R CHANGE LEVER	1	PC.
007	650689-0	SWITCH C3JW-2B	1	PC.
008	251468-5	- FLAT HEAD SCREW M6X22	1	PC.
009	763238-5	KEYLESS DRILL CHUCK 10	1	
010	123587-6	CHANGE LEVER ASS'Y	1	
	D10	INC. 5		
011-1	123761-6	GEAR ASSEMBLY	1	
012	266490-9	TAPPING SCREW PT 2X6	3	PC.
013	620487-6	CONTROLLER	1	
014	629178-6	STATOR	1	PC.
015	619393-0	ROTOR	1	
016	644813-5	TERMINAL	1	
017	183C34-7	HOUSING SET	1	
	D10	INC. 1		
A01	251314-2	+ SCREW M4X12	1	PC.
A02	346909-5	HOOK	1	
E01	808F86-2	CAUTION LABEL	1	